


Phone Interview Recording Signal Flow

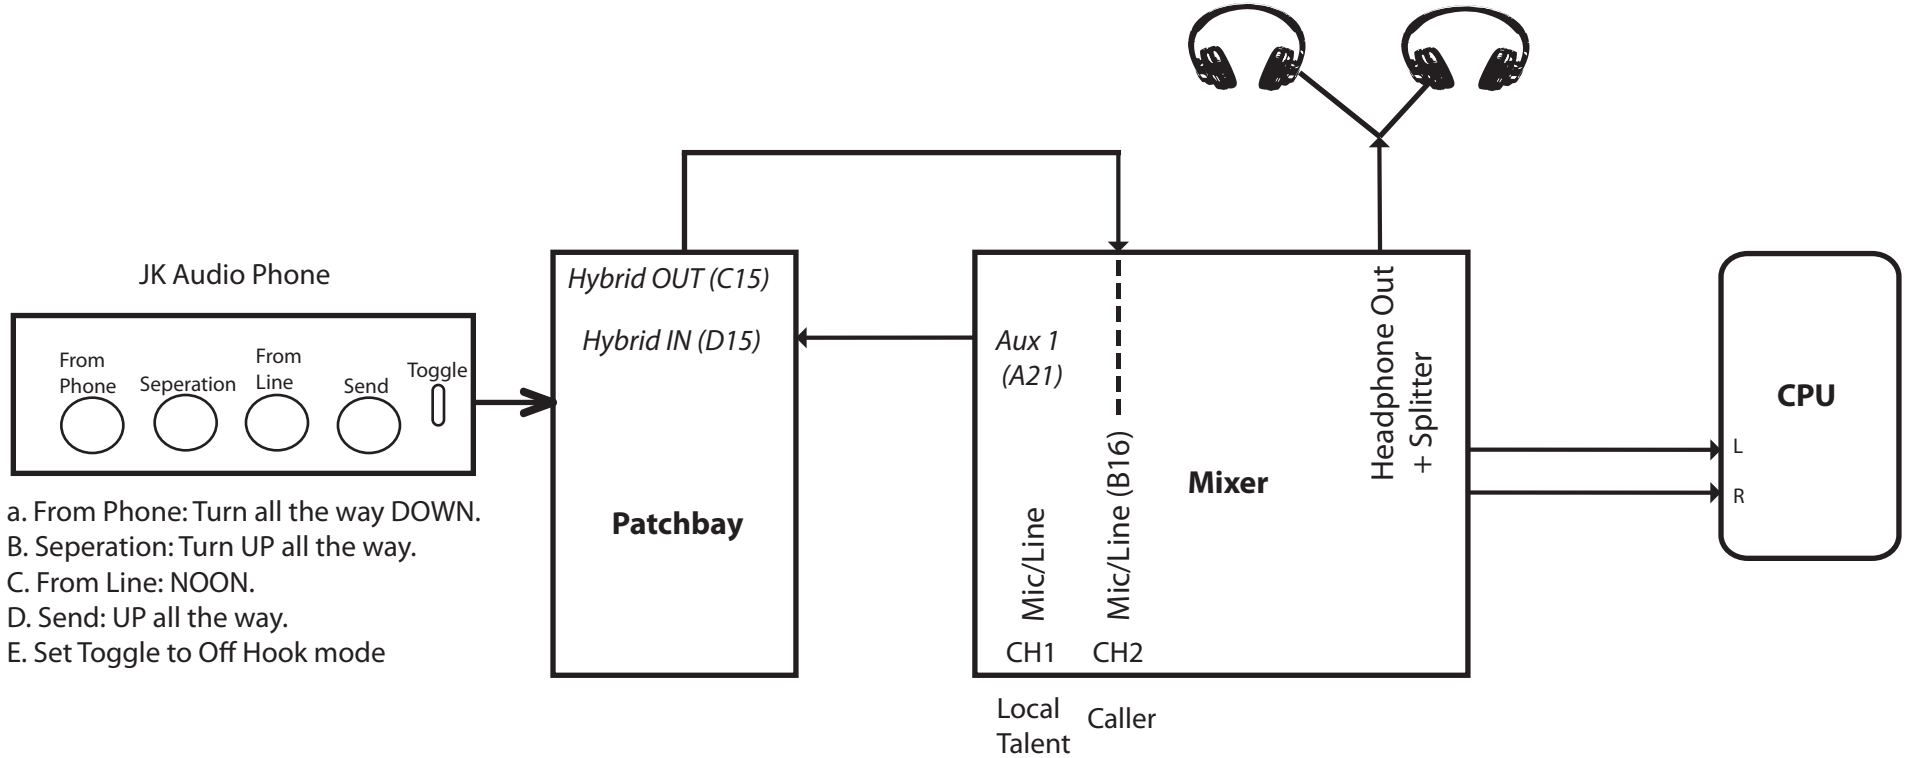

- From Phone: Turn all the way DOWN.
- Separation: Turn UP all the way.
- From Line: NOON.
- Send: UP all the way.
- Set Toggle to Off Hook mode

Patching and Level Setting:

- Patch Hybrid OUT (C15) to Mic/Line CH2 (B16) Caller.
- Patch Aux Send 1 (A21) to Hybrid IN (D15)
This sends the local talent to the caller.
- Turn Aux Master to 12 o'clock.
- Turn up Aux 1 up ONLY on Mic/Line CH1 Local talent.
- Plug your mic into CH1 of the mixer.
- On Ch1 - Pan hard left.
- On Ch2 - Pan hard right.
- Channel Faders set to Unity.
- Headphone level set to noon.
- Main Faders control level to the computer.

Digital Performer

- Open Digital Performer
- Make 2 mono Audio tracks
Ch. 1 - input 1 = local talent
Ch. 2 - input 2 = caller
- Press record.

Peak

- Enable the Record window.
- Left channel will be the caller.
- Right channel will be the local talent.